


SR-4204 Quick Reference Guide

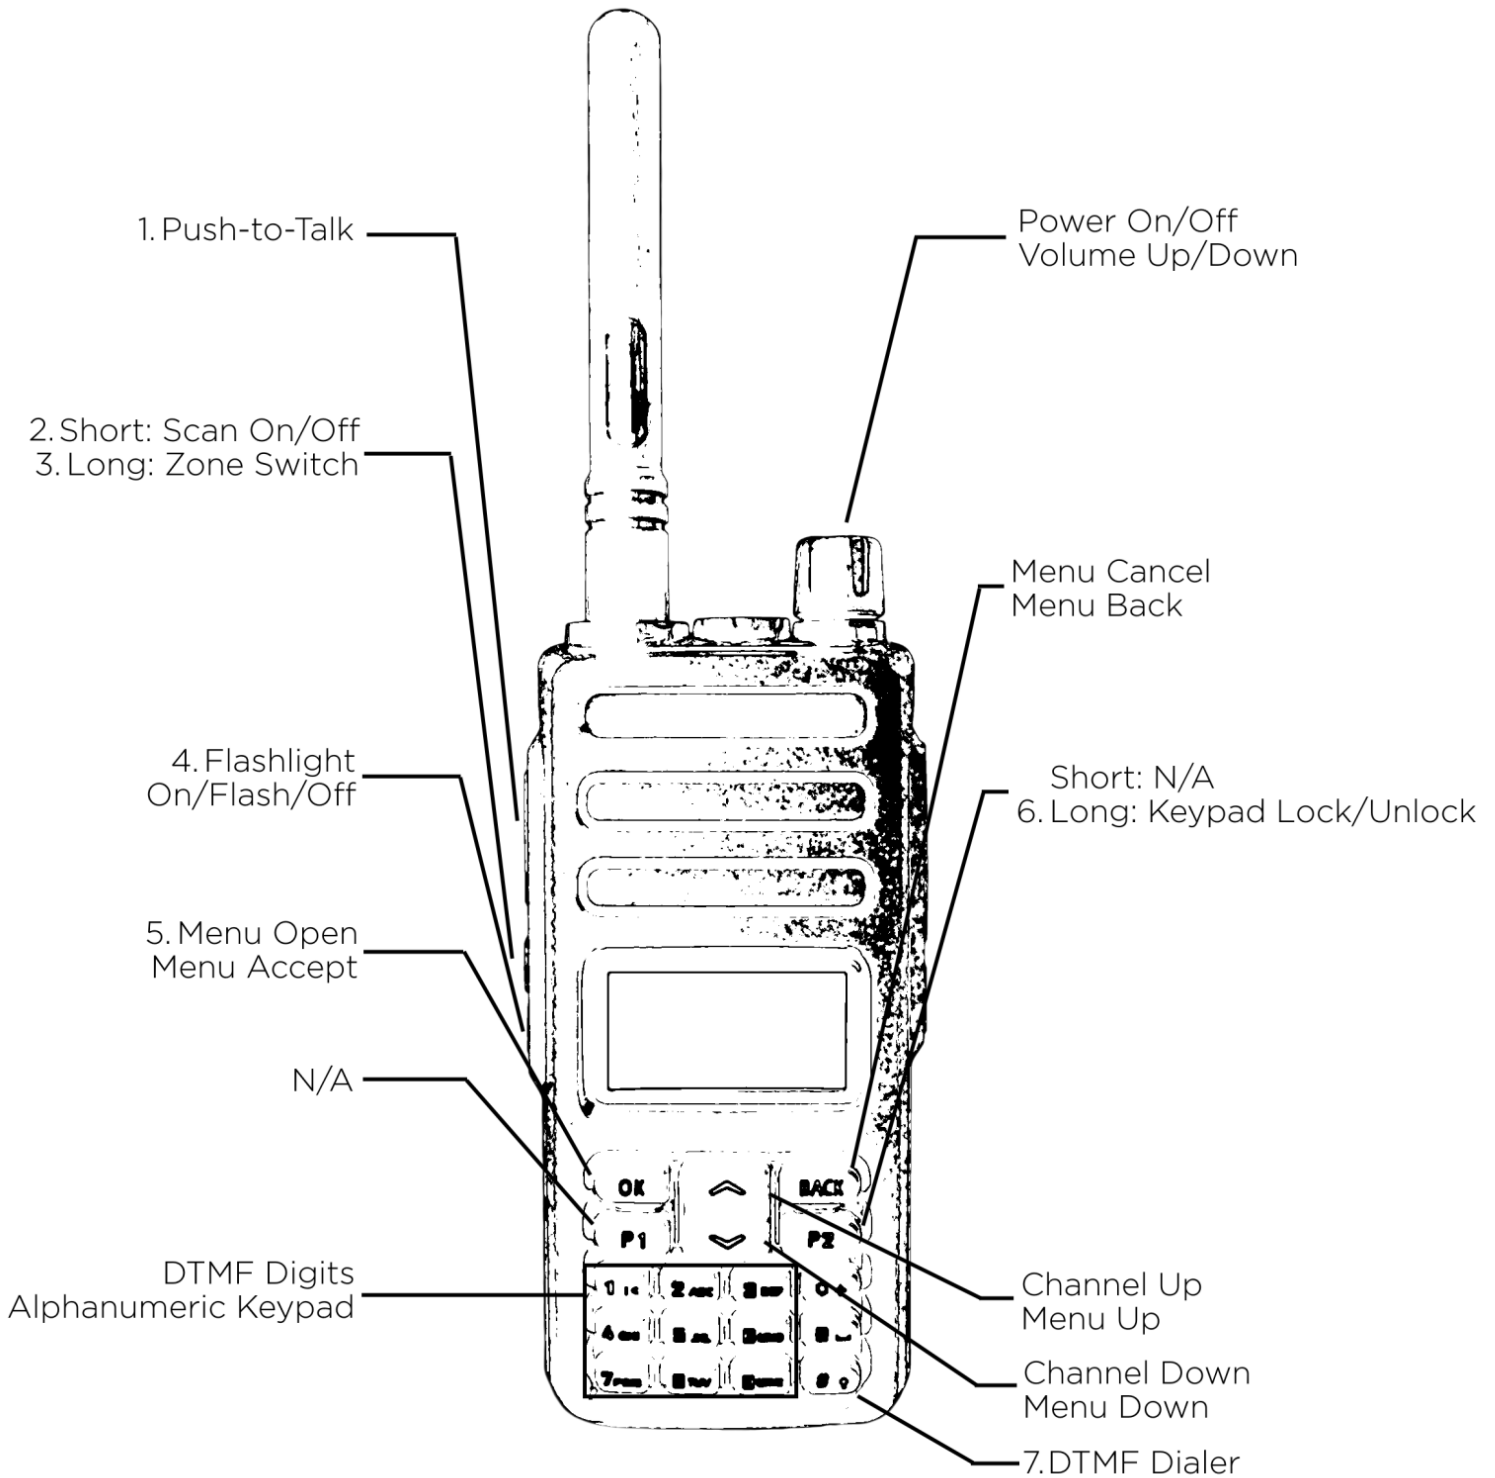

1. Push-to-Talk Button
 - a. Press and hold the push-to-talk button and speak clearly with the radio no less than 4 inches away from your mouth.
 - b. Release the push-to-talk button to finish transmitting.
 - c. Radio will time out if push-to-talk is held for more than 3 minutes.
2. Scan On/Off
 - a. Briefly tap the Scan On/Off button to enable scan mode.
 - b. When in scan mode, the radio will rapidly cycle through listening to each channel designated in the scan list by the radio programmer.
 - c. During scan mode, the radio will pause scanning any time a signal is received on a channel being scanned.
 - d. Briefly tap the Scan On/off button again to disable scan mode.
3. Zone Switch
 - a. Press and hold the Zone Switch button for 3 seconds to show the Zone Switch menu.
 - i. Only applicable if radio has more than one programmed zone.
 - b. On the Zone Switch menu, use the Menu Up and Menu Down arrows to select desired zone.
 - c. Press Menu Accept to switch to the desired zone.
4. Flashlight
 - a. Briefly press the orange Flashlight button to activate the LED flashlight on the top of the radio.
 - b. Briefly press the orange Flashlight button again to switch the LED flashlight to flashing mode.
 - c. Briefly press the orange Flashlight mode an additional time to deactivate the LED flashlight.
5. Menu Navigation
 - a. From the radio home screen, briefly press the green Menu Open button to enter the radio menu.
 - b. To change the selection of menu options, briefly press either the Menu Up or Menu Down buttons.
 - c. To choose a selected menu option, briefly press the green Menu Open button an additional time.
 - d. To exit back to the previous menu level, or exit the menu entirely, briefly press the red Menu Back button
6. Keypad Lock/Unlock
 - a. To engage the keypad lockout, press and hold the Keypad Lock/Unlock button for 3 seconds.
 - i. Radio will display "KeyPad Lock"
 - ii. Padlock will show in upper right corner of display.
 - b. To disable the keypad lockout, press and hold the Keypad Lock/Unlock button for 3 seconds.
 - i. Radio will display "KeyPad Unlock"
 - ii. Padlock will no longer be visible in upper right corner of display.

7. DTMF Dialer

- a. Press the DTMF Dialer button to enter the “DTMF Dial” prompt.
- b. Use the DTMF Digits keypad to enter desired numerical code.
 - i. 3. If an incorrect code is entered, or if you wish to cancel sending a code entirely, briefly press the Keypad Lock/Unlock button to return to the home screen.
- c. 4. Once desired code is entered, press the Push-to-Talk button to send the code over-the-air.
 - i. Push-to-Talk button does not need to be held for the entire duration of transmitting the code. Radio will automatically continue until entire code is transmitted.
- d. 5. Once code transmission is completed, radio will automatically return to the home screen.